


1

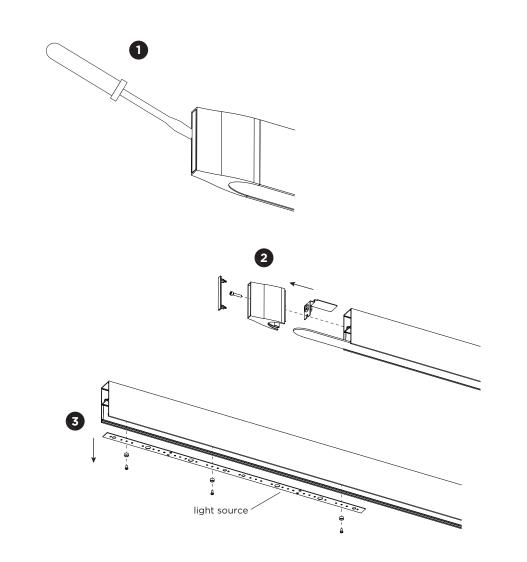





Remove the clips on both sides by pushing them out with a flat screwdriver.

Unscrew the endcaps and pull out the bracket and diffusor.

Remove the light source by unscrewing the screws.



 $\mathbf{1}$ 

2

The light source is replaceable by an authorized professional. For advice contact your Wever & Ducré customer service contact point.

A G F

This luminaire contains a light source with the energy class F.

2